


Interface - Signal Locations

1. Engine speed signal from ignition coil
2. Power from ignition switch (terminal 15)
3. Control signal to injection valves
4. Ground
5. Ground
6. Not connected
7. Power from ignition switch (terminal 15)
8. Signal from coolant temperature sensor
9. Diagnosis terminal (sensor power)
10. Diagnosis terminal
11. Signal from air flow meter
12. Control signal to fuel pump relay
13. Signal from lambdasensor
14. Signal from full load switch
15. Signal from idle switch

Wiring harness

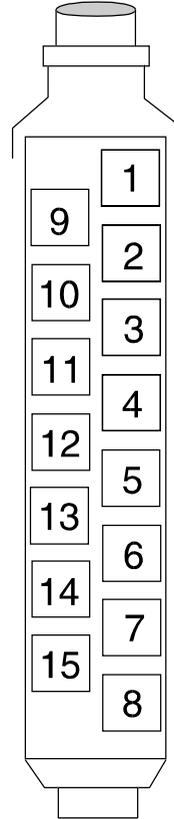

Note: Interface viewed from below.

Wiring Diagram

This wiring diagram is an example. Check in the relevant workshop manual for the diagram of the car you are working with.

